


# Adele/Elite Table Base Assembly Instructions

1. Screw the nut onto the threaded rod approx. 1". Screw into spider plate leaving some room.



2. Screw the two bolts into the top of the spider plate.

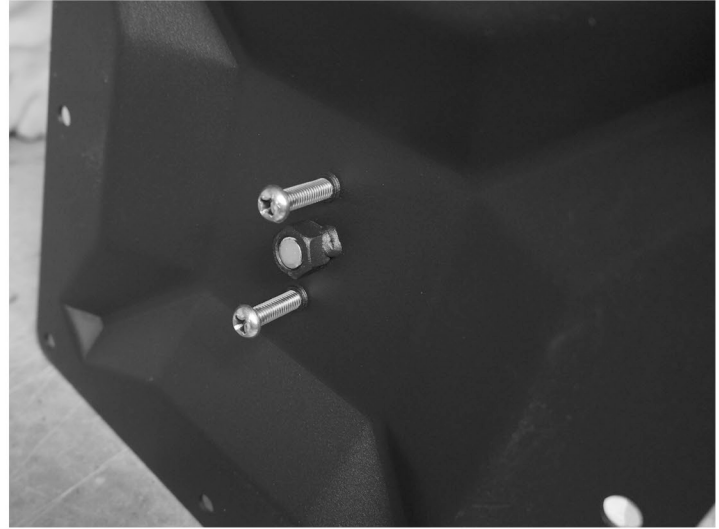

3. Place the column, side with the holes, down onto the spider plate.



4. Flip over so spider plate faces the floor. Position base plate on column, rotating until it falls into place in the notch.



5. Attach nut to the threaded rod at the bottom of the base plate. Tighten with wrench.

