
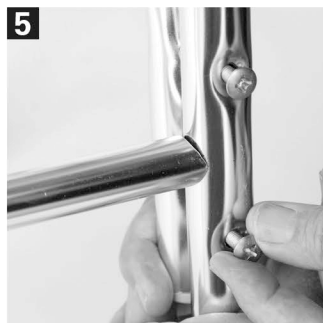
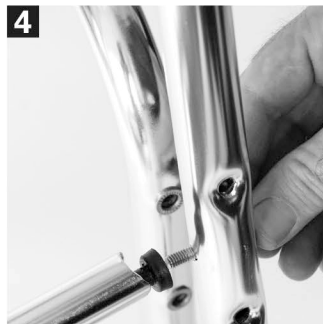



# Parma & Madrid Barstool Assembly

(Parma shown below)

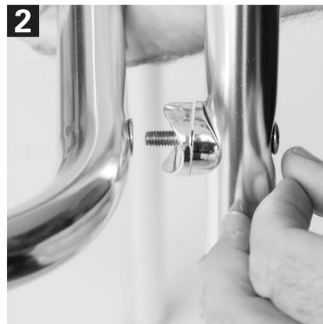

## Parts:

1. Barstool
2. Footrest
3. Rear cross bar with internal bar fastener,
4. 2 1-5/8" screws,
5. 6 1-1/4" screws,
6. 4 spacers

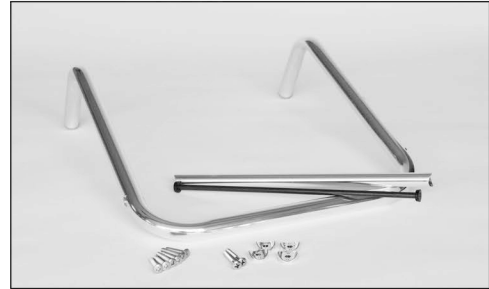

## Tools required

1. Screwdriver

## Assembly

1. Place 1-5/8" screw through outside hole on front leg and place 2 spacers, (flat sides back to back) on inside of leg.
2. Attach one side of footrest. Do not tighten completely.
3. Spread legs. Repeat steps 1&2 on opposite front leg. Do not tighten completely.
4. With internal bar inside attach rear cross bar to rear legs using 1-1/4" screws. Do not tighten completely.
5. Align footrest with back legs of stool and attach with two 1-1/4" screws on each leg.
6. With chair standing on flat surface tighten all screws.

