



Stiletto Table Base Assembly Instructions


1. Screw nut about an inch onto the threaded rod. Place the second nut into the hexagonal hole in the spider.

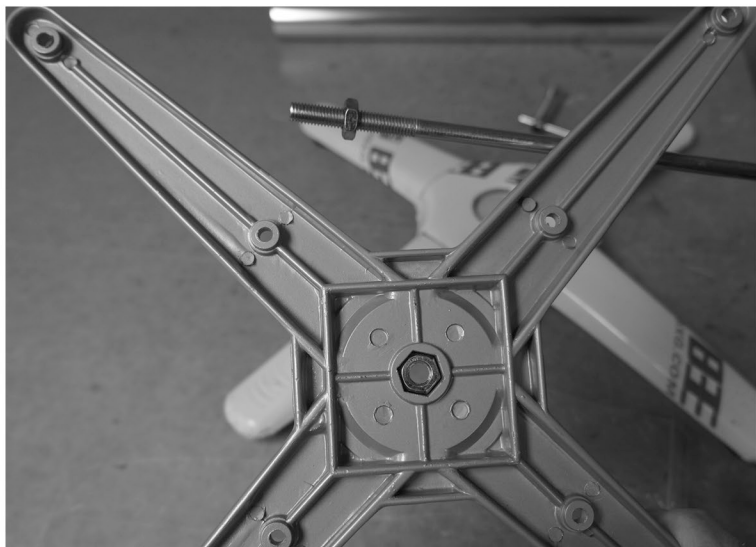

2. Screw the threaded rod into the nut inside the spider until flush. Tighten the top nut with a wrench.

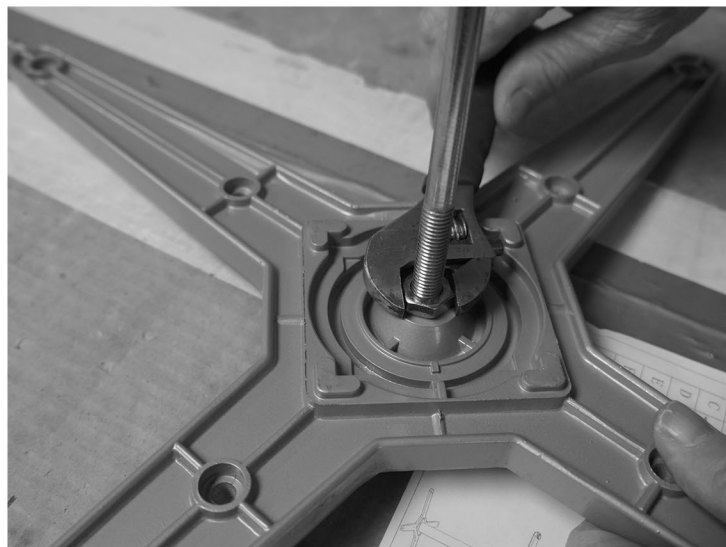

3. Place chrome column tube over the threaded rod. Line up notch in column with the small welded bar on the spider.

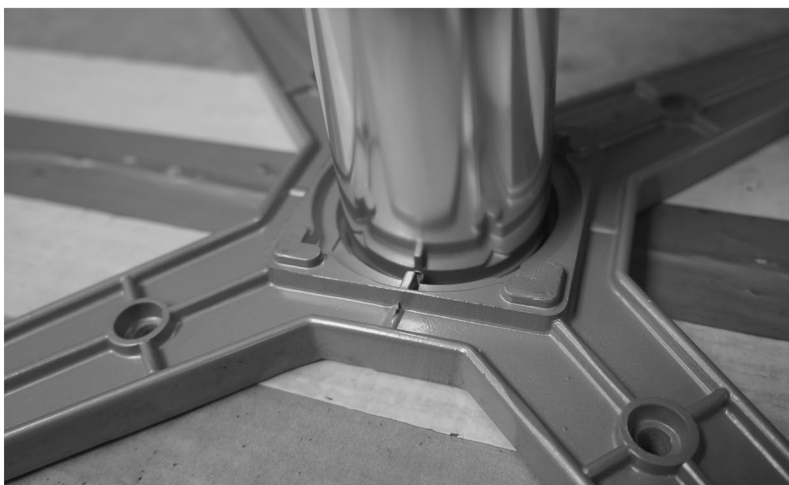

4. Fit the base onto threaded rod sticking out of the column. Place flat washer, lock washer, and finally the nut onto the rod. Wrench tighten nut.

